

Instructions

Flap Track Fairings

Step #1

Trim flap track fairings to indicated line.

Note: For the best look and fit, trim flap track fairings to indicated line a little at a time. No two flap tracks are exactly the same.

Step #2

Bonding Method

Recommended bonding material is 3M-#5200, which can be purchased at most marine boating supply stores, or from AIRLINKTECH. You could also use Permatex Ultra Gray.


After trimming fairings to final fit, first temporarily hot glue the rear section in place and then the forward fairing. See figure 1.



Figure 1

The forward fairing and the aft fairing have to fit inside each other without any interference. If the fit is tight, temporarily insert a small, wooden wedges into the aft end of forward fairing and apply moderate heat with a hot air gun to do a little re-forming.

Apply a small fillet of adhesive around the outside of fairings. After the sealant has set up, remove the wooden wedges. Verify that the aft fairing does insert into the forward fairing smoothly without interference.

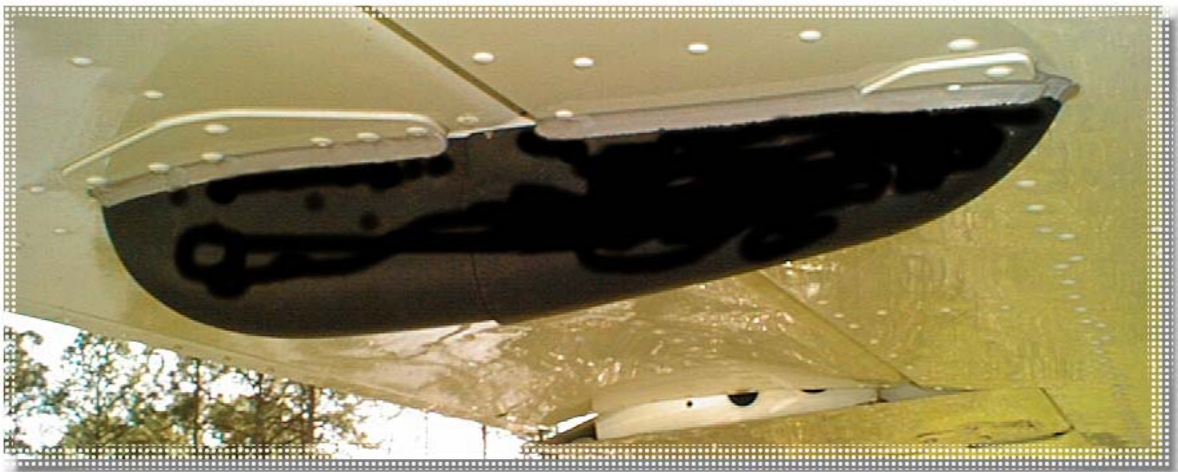

Before you seal and prime the flap track fairings, de-wax/de-grease them thoroughly.